



CONNECTION AND OPERATING INSTRUCTIONS

- BLACK WIRE** to Battery Negative or Chassis
- RED WIRE** to Battery Positive or + 12 volts
- GREEN WIRE** to Spark Coil CB Connection or Tacho Output on Sparkbox
- BLUE WIRE** via Toggle Switch to Battery Negative or Chassis

Normal operation is achieved with the toggle switch open circuit. It is suggested that this position be labelled RUN and the closed position READ or TELL-TALE. To read Tell-Tale, with power applied to the tachometer, move toggle switch READ position. The Tell-Tale is automatically reset to Zero when the toggle switch is moved back to the RUN position, as long as power is still applied to the tachometer.

If the toggle switch is set to READ, so displaying the Tell-Tale, and the power is disconnected from the tachometer then when power is re-applied the Tell-Tale will again be displayed.

If, however, in the above situation the toggle switch is moved back to its RUN position while the power is disconnected then the Tell-Tale will still be in the memory. It will be necessary to move the toggle switch to READ then back to RUN with the power applied to reset the Tell-Tale.